# blueMesh

blueMesh Industrial



# APPLICATIONS

The BMS-M100-PIR-DC1-BLE-SR-Z10 and the BMS-M110-PIR-DC1-BLE-SR-Z10-BZ are a series of 1-Channel Wireless Fixture Controllers. Both versions have active high outputs for relay control.

The BMS-M100-PIR-DC1-BLE-SR-Z10 and the BMS-M110-PIR-DC1-BLE-SR-Z10-BZ use PIR motion detection architecture and passive infrared (PIR) technology for improved detection coverage.


The controllers are IP65 rated for exterior use. They are suitable for a variety of indoor and outdoor applications in temperatures ranging from -40° to 70°C. The

BMS-M110-PIR-DC1-BLE-SR-Z10-BZ version also has an integral photosensor. These devices are controlled wirelessly via Bluetooth® Mesh technology allowing for wireless


# **OVERVIEW**

- 1-Channel 0-10VDC Dimming-Mounts On Fixture
- Bluetooth® SIG Mesh
  - PIR Sensor Mounting Height Up To 40 ft (12.2 m)
- Photocell (-110 version)
- High-End Trim, Zoning, Continuous Dimming
- Powered by12-24VDC

# PHYSICAL DIMENSIONS



(78.74mm)

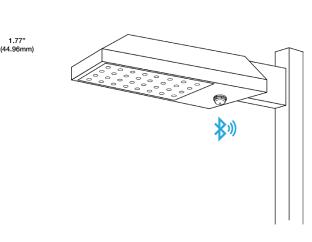

dimming of luminaires. The compact size allows for seamless integration to the fixture.

- Sensor Output (active high)
- IP-65 Rated for Outdoor or PIR Indoor Applications
- Quick Connector For Easy Installation

# Product Type:

SUMMARY

c 🖳 us FC C € 🗊 😭 Bluetooth

**1-Channel Wireless Fixture Controller** (-110-model includes photosensor) Input Voltage

12-24 VDC | 50 mA max 0-10V Output 30 mA

### Height:

High Bay 20-40ft (6.1-12.2m) Low Bay 8-30ft (2.4-9.1m) Max Sensor Range: High Bay 80ft (24.4m) radius Low Bay 60ft (18.3m) radius Load Control Output: 10-22VDC 30mA (Active High) **Fixture Mount: Mounts to** BMRC-ZKV-R1L receptacle, sold separately. Max Bluetooth Range<sup>1</sup>: 100ft (30.4m)

### Operating Temperature:

-40°C to 70°C (-40°F- 158°F)

Storage Temperature:

### -40° C to 85°C (-40°F- 185°F)

Relative Humidity:

90-95% non-condensing at 30°C

Color<sup>-</sup>

### Brown (standard default), Black or White

Note:

1. Bluetooth Range is highly dependent on the integration of fixtures, surrounding environment and conditions. It is recommended to conduct testing for range accuracy.

### Drawing Are Not To Scale

# blueMesh

# OPERATION

### Bluemesh<sup>®</sup> Controls:

Qualified by Bluetooth SIG for its Bluetooth Mesh 1.0.1 specification, the controller connects to a Bluetooth mesh network and is accessed via the BlueMesh web portal or mobile app for initial design, setup and scheduling, as well as subsequent parameter adjustments.

Advanced functionality such as energy monitoring, and demand response is available with the optional BlueMesh<sup>®</sup> Gateway.

1-Channel: Allows for one 0-10V dimming channel for driver control.

**Relay Control:** Load control output (active high) can be used to trigger relays or other control circuitry.

**Photosensor (BMS-M110-PIR-DC1-BLE-SR-Z10 version only)**: Features a single setpoint for ambient light detection for automated control.

**Quick Connector:** The controller mounts to a receptacle (BMRC-ZKV-R1L). One receptacle is required for mounting each controller.

See BlueMesh® Commissioning User Manual for more information.

# ACCESSORIES

### Power Pack:

Sensor Lens: The BMS-M100-PIR-DC1-BLE-SR-Z10 and the BMS-M110-PIR-DC1-BLE-SR-Z10 require a High Bay or Low Bay lens option (sold separately).

The controllers require 12-24VDC power from a separate power pack or driver with auxiliary output.

## **ORDERING INFORMATION**


### Example: BMS-M100-PIR-DC1-BLE-SR-Z10

BMS		PIR	DC1	BLE	SR	Z10	
BMS	<b>M10N</b> Low Bay Lens (No Photo Sensor)	Passive Infrared (PIR) Sensor	12-24VDC	Wireless	BlueMesh Compatible	Zhaga	<b>BN</b> Brown Finish
	<b>M10H</b> High Bay Lens (no photo sensor)						WT White Finish
	<b>M11N</b> Low Bay Lens (with photo sensor)						<b>BK</b> Black Finish
	M11H						


**M11H** High Bay Lens (with photo sensor) |



## **Sensor Patterns**

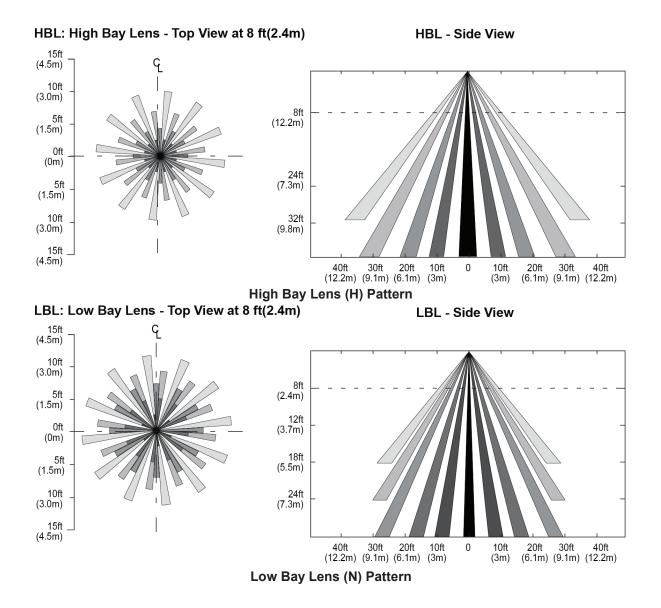


# Installation Of Sensor

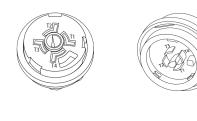

The receptacle for Sensor is installed at fixture manufacturer and is shipped to job site with a protective cap


Tab/Slot	Designation	Notes		
T1	12-24VDC+ Power To Sensor	Red Wire (Receptacle)		
T2	12-24VDC- Power And 0-10VDC-/Common	Black Wire (Receptacle)		
Т3	0-10VDC+ Control Signal From <b>Sensor</b>	Purple (Violet) Wire (Receptacle)		
T4	10-22VDC 30mA Load Sensor Output (Active High)	Yellow Wire (Receptacle)		

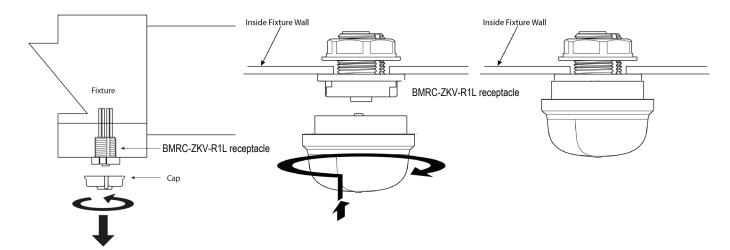


To install Sensor, first remove the protective cap on the BMRC-ZKV-R1L receptacle by pushing up and rotating counterclockwise.

To install Sensor insert, push up and rotate to lock. No tools required. Luminaires can be easily and quickly upgraded.


Example Application: Sensor Installed With Power Pack (BMPP-8-700 or BMPP-8-900) - Single Fixture

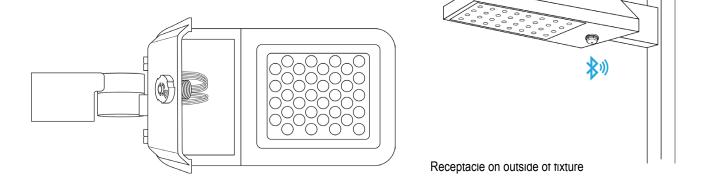


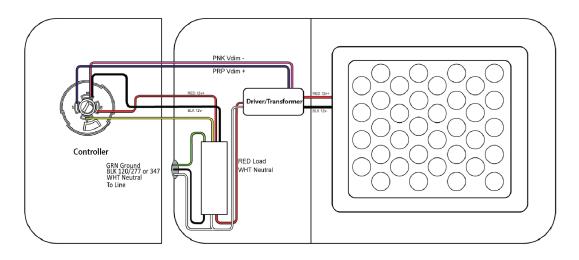


Receptacle with BMPP-8-700 power pack, and LED dimmable driver (open wiring compartment)

Example Application: Sensor Installed With Power Pack (BMPP-AC-PP250) - Single Fixture With Multiple Drivers

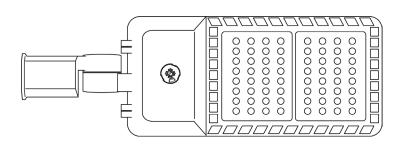

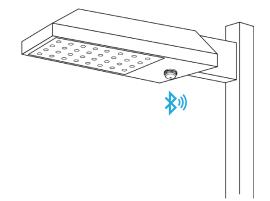


Receptacle on outside of fixture

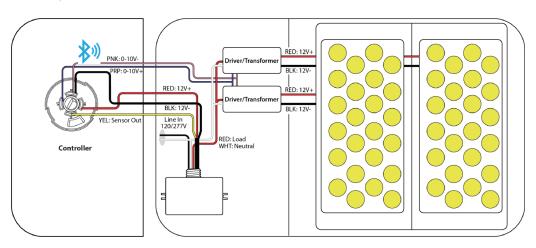


Receptacle with power pack, and LED driver (open wiring compartment)




Example Application: Controller Installed With 0-10V Dim-To-Off With 12VDC Auxiliary Output

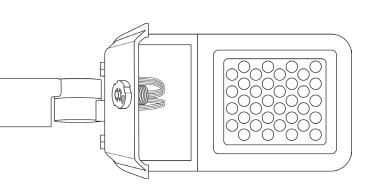

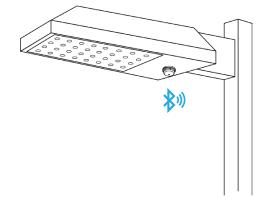

Receptacle on outside of fixture

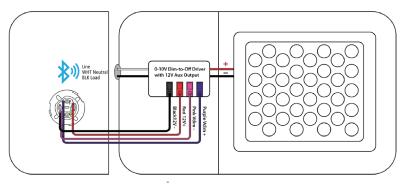

Receptacle, 0-10V dim to off driver with 12v auxiliary output (wiring compartment open)

### **Reset Instructions**

Using a magnet, hold the magnet against the dot labeled RST (reset).

